 


SPARE PARTS CATALOGUE

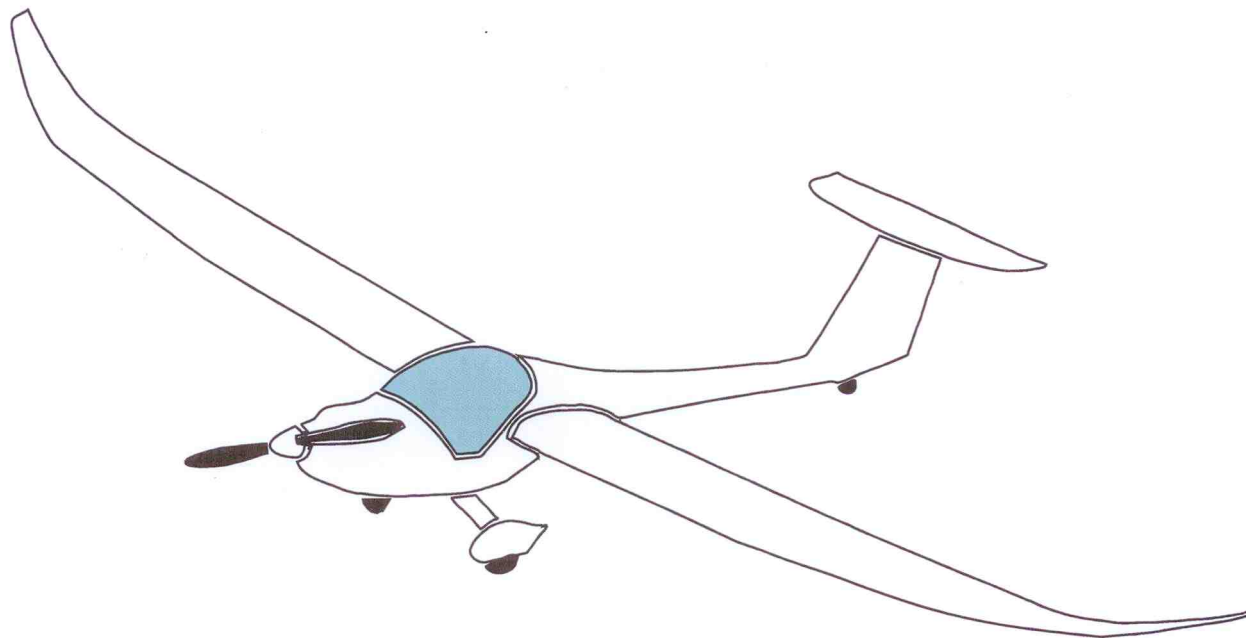

UFM-13/15 Lambada



UFM-13/15 Lambada

Cockpit and Fuselage

Electric parts

SL-090	12V socket
SL-091	KS-4 switch
SL-092	KS-6 switch
SL-112	Switch (fuse)
SL-110	FUSE
SL-111	Circuit breaker
SL-113	Button Push To Talk



Others

L-096	Complete canopy tinted green with frame
L-095	Side ventilate window
L-099	Canopy locking lever (set 2 pcs)
L-100	Canopy hinge (set 2 pcs)
L-098	Seat covers (for 2 seats)
SL-099	Seat belts
L-101	Fabric stick covers
SL-100	Handle of the control stick
SL-093	Fuel indicator
SL-097	Fire extinguisher
SL-200	Logbook

Fuselage

L-124	RS cover (Stratos/Galaxy)
L-122	Pitot tube

  Section cockpit - pictures

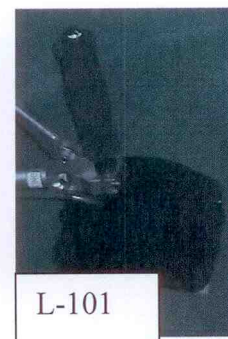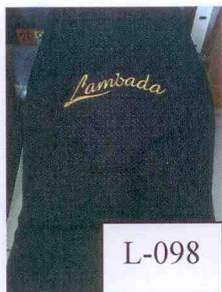



UFM-13/15 Lambada

Wings and Stabilizer

Fuel tank

SL-036	Fuel tank float
SL-037	Fuel tank float - sealing
SL-039	Fuel tank key
SL-045	Tank cap
SL-040	Drain valve
SL-041	Drain valve sealing

Wings

L-043	Main wing pin
L-044	Main wing pin safety pin



Extensions

SL-046	Small extension
L-047	Long extension
SL-038	Winglets "T" key

Stabilizer

SL-201	Stab. screw
SL-202	Stab screw safety pin

  Section wings - pictures

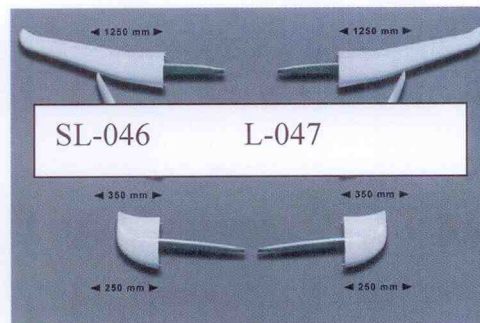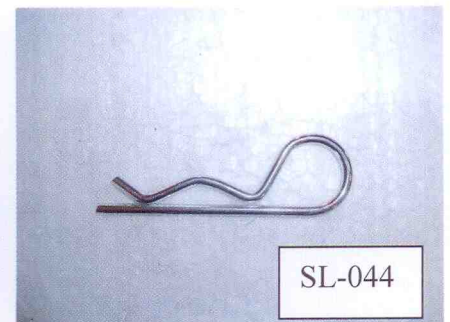

UFM-13/15 Lambada

Landing gear

Front leg

L-007	Front wheel fork
L-003	Front wheel axis
L-009	Front wheel cover
L-005	Front wheel silentblock
L-008	Front wheel lever
SL-009	Front wheel rim
SL-010	Front wheel tyre
SL-008	Front wheel tube

Main landing gear

L-001	Main landing gear with wheel axis
L-002	Main landing gear with wheel axis, ground wire and brake tube
L-004	Wheel cover (1pcs)
L-012	Complete wheel 16x4 (rim, tyre, tube)
L-013	Main wheel rim
L-015	Tyre cube
L-016	Tyre 16x4
L-014	Tube 16x4






Tail wheel

L-021	Tail wheel fork
L-022	Tail wheel axis
L-023	Tail wheel pushrod (set 2pcs)
L-018	Complete tail wheel (rim, tyre, tube)
L-020	Tail wheel rim
L-017	Tail wheel tyre 210x65
L-019	Tail wheel tube 210x65
L-024	Tail wheel (tricycle version)

Braking system

SL-029	Main brake cylinder - on stick (čaja)
L-026	Brake unit of the wheel
L-027	Brake disc
L-028	Brake pad (set for aircraft 4pcs)
SL-030	Screwing ("T" part with elbow)
SL-031	Screwing ("L" part with elbow)
SL-032	Hose for brake liquid 6x1 - 1m
SL-033	Bleed screw
L-034	Brake hose holder (set)

     Section landing gear - pictures

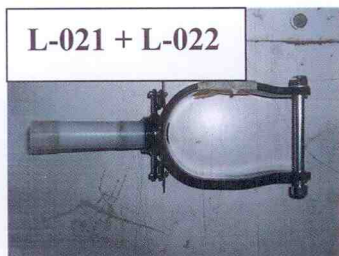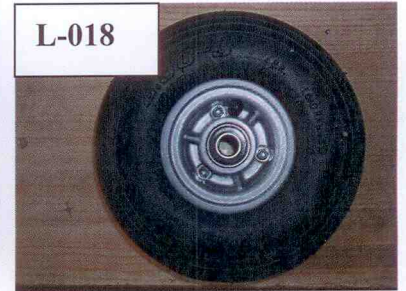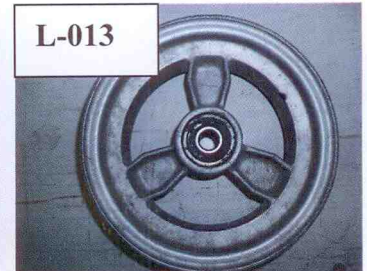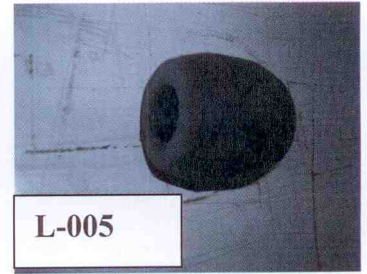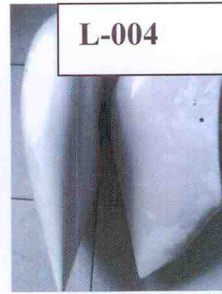

UFM-13/15 Lambada

Engine parts

Laminated parts

L-073	Rotax engine cover upper
L-074	Bottom Rotax engine cowl

Hoses

SL-060	Fuel hose - 1m
SL-075	Oil cooler hose - 1m
SL-076	Water cooler hose- 1m
L-066	Heating hose - 3m

Filters

SL-062	Air filter
SL-069	Oil filter Rotax
SL-082	Fuel filter

Other engine parts

SL-072	Oil 10W40 - 1l
SL-071	Spark plug Rotax (100hp)
SL-070	Spark plug Rotax (80hp)
SL-064	Engine silentblock
SL-065	Engine silentblock washer
SL-079	Oil cooler (80hp)
SL-080	Oil cooler (100hp)
SL-078	Water cooler
SL-083	Water cooler silentblock
L-085	Bottom holder of water cooler
L-061	Heating hub
SL-067	Switch box
SL-068	Heating pushrod
L-081	3 way fuel valve
L-084	Exhaust system set

Propeller

SL-077	Spinner of the propeller
L-063	Blade cover 1pcs

Section engine - pictures



SL-060



L-061



SL-062



SL-064



SL-065



L-066



SL-067



SL-068



SL-069



SL-070 ; SL-071



SL-072



L-073



SL-076



SL-077



SL-078



SL-079



L-081



SL-082



SL-083



L-084