


# SPARE PARTS CATALOGUE

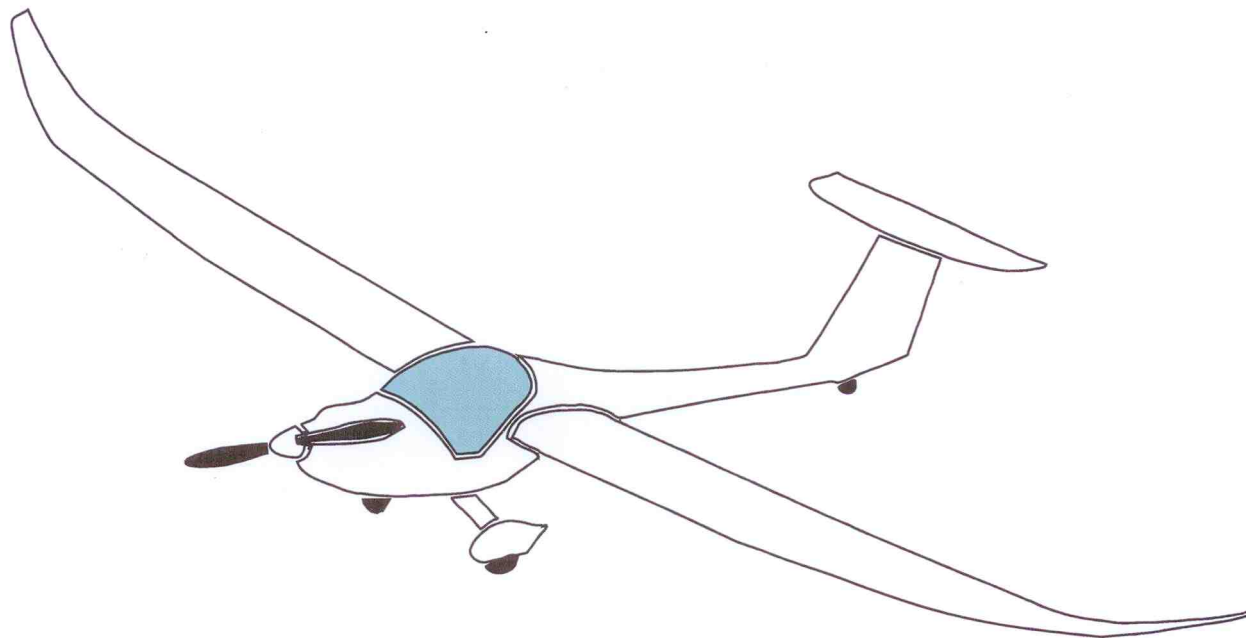

## UFM-13/15 Lambada





## UFM-13/15 Lambada

### Cockpit and Fuselage

#### Electric parts

SL-090	12V socket
SL-091	KS-4 switch
SL-092	KS-6 switch
SL-112	Switch (fuse)
SL-110	FUSE
SL-111	Circuit breaker
SL-113	Button Push To Talk

#### Others

L-096	Complete canopy tinted green with frame
L-095	Side ventilate window
L-099	Canopy locking lever (set 2 pcs)
L-100	Canopy hinge (set 2 pcs)
L-098	Seat covers (for 2 seats)
SL-099	Seat belts
L-101	Fabric stick covers
SL-100	Handle of the control stick
SL-093	Fuel indicator
SL-097	Fire extinguisher
SL-200	Logbook

#### Fuselage

L-124	RS cover (Stratos/Galaxy)
L-122	Pitot tube

Section cockpit - pictures



SL-090



SL-091




SL-092



SL-093




L-095

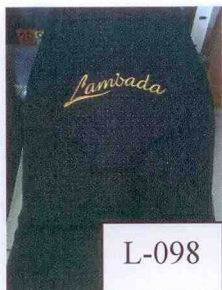

L-098



SL-099

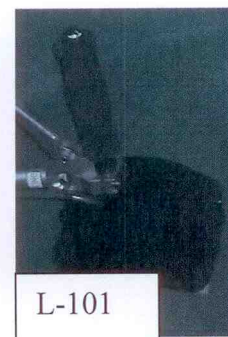

L-101



SL-100



SL-110



SL-111



SL-112



SL-113



## UFM-13/15 Lambada

### Wings and Stabilizer

#### Fuel tank

SL-036	Fuel tank float
SL-037	Fuel tank float - sealing
SL-039	Fuel tank key
SL-045	Tank cap
SL-040	Drain valve
SL-041	Drain valve sealing

#### Wings

L-043	Main wing pin
L-044	Main wing pin safety pin

#### Extensions

SL-046	Small extension
L-047	Long extension
SL-038	Winglets "T" key

#### Stabilizer

SL-201	Stab. screw
SL-202	Stab screw safety pin

